

Разбрасыватели с ручным управлением SP-65, SP-85, SP-85SS, SD-95, SD-95SS

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Россия (495)268-04-70


Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Киргизия (996)312-96-26-47

Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Казахстан (7172)727-132

Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Broadcast & Drop

WALK-BEHIND
SPREADERS

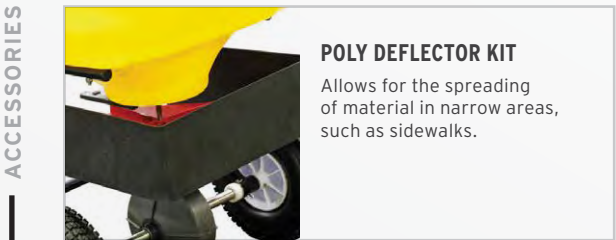

POLY DEFLECTOR KIT
Allows for the spreading of material in narrow areas, such as sidewalks.

FEATURES & SPECIFICATIONS

SINGLE-SLOT PORT DESIGN

SP-65/SP-85/SP-85SS

A single-slot port design and extra-wide throat opening to maintain a smooth, consistent material flow.

ADJUSTABLE SIDEWALK DEFLECTORS

SP-85/SP-85SS

Limit spread pattern to keep material on the intended path.

PRECISE MATERIAL CONTROL

SD-95/SD-95SS

Drop spreaders deliver a consistent flow of material directly to the ground, reducing waste and preventing material from flinging into unwanted locations.

POLY COVER

A clear poly cover provides weather protection and keeps out foreign objects, while allowing the operator to easily monitor material levels.

TOP SCREEN

A standard top screen prevents large chunks of material from entering the hopper.

STAINLESS STEEL FRAME

SP-85SS/SD-95SS

Helps eliminate rust issues on that area of the spreader.

OVERSIZE TIRES SP-85/SD-85SS & SD-95/SD-95SS

Large, pneumatic tires enhance maneuverability over ice and snow.

MODEL:	SP-65	SP-85/ SP-85SS	SD-95/ SD-95SS
Spreading Width	Up to 20'	Up to 20'	28"
Capacity (Weight)	100 lb	160 lb	160 lb
Empty Weight	25 lb	42 lb	55 lb
Spread Pattern	Broadcast	Broadcast	Drop

ACCESSORIES

See Pages 22 & 23 for full list of accessories.

Walk-Behind Broadcast Spreaders Specifications

Construction

Imperial	SP-65	SP-85	SP-85SS
Frame	Powder coated steel	Powder coated steel	Stainless steel
Hopper	One-piece LLDPE safety yellow poly	One-piece LLDPE safety yellow poly	One-piece LLDPE safety yellow poly
Spinner Drive Assembly	Nylatron® gear drive	Nylatron® gear drive	Nylatron® gear drive
Spinner	10" molded plastic	10" molded plastic	10" molded plastic

Metric	SP-65	SP-85	SP-85SS
Frame	Powder coated steel	Powder coated steel	Stainless steel
Hopper	One-piece LLDPE safety yellow poly	One-piece LLDPE safety yellow poly	One-piece LLDPE safety yellow poly
Spinner Drive Assembly	Nylatron® gear drive	Nylatron® gear drive	Nylatron® gear drive
Spinner	25.4 cm molded plastic	25.4 cm molded plastic	25.4 cm molded plastic

Dimensions

Imperial	SP-65	SP-85	SP-85SS
Approx. Weight (Empty)	25 lb	42 lb	42 lb
Overall Length	50"	52"	52"
Overall Height	28"	33"	33"
Overall Width	26"	29"	29"
Hopper Length	18"	20"	20"
Hopper Width	23"	23"	23"

Metric	SP-65	SP-85	SP-85SS
Approx. Weight (Empty)	11.3 kg	19.1 kg	19.1 kg
Overall Length	127.0 cm	132.1 cm	132.1 cm
Overall Height	71.1 cm	83.8 cm	83.8 cm
Overall Width	66.0 cm	73.7 cm	73.7 cm
Hopper Length	45.7 cm	50.8 cm	50.8 cm
Hopper Width	58.4 cm	58.4 cm	58.4 cm

Operational

Imperial	SP-65	SP-85	SP-85SS
Capacity (Weight)	100 lb	160 lb	160 lb
Spreading Width	Up to 20'	Up to 20'	Up to 20'

Metric	SP-65	SP-85	SP-85SS
Capacity (Weight)	45.4 kg	72.6 kg	72.6 kg
Spreading Width	Up to 6.1 m	Up to 6.1 m	Up to 6.1 m

Standard Equipment

Walk-Behind Broadcast Spreaders Specifications

Imperial	SP-65	SP-85	SP-85SS
Top Screen	10-gauge wire grid	10-gauge wire grid	10-gauge wire grid
Cover	Clear poly cover	Clear poly cover	Clear poly cover

Metric	SP-65	SP-85	SP-85SS
Top Screen	10-gauge wire grid	10-gauge wire grid	10-gauge wire grid
Cover	Clear poly cover	Clear poly cover	Clear poly cover

Walk-Behind Drop Spreaders Specifications

Construction

Imperial	SD-95	SD-95SS
Frame	Powder coated steel	Stainless steel
Hopper	One-piece LLDPE safety yellow poly	One-piece LLDPE safety yellow poly

Metric	SD-95	SD-95SS
Frame	Powder coated steel	Stainless steel
Hopper	One-piece LLDPE safety yellow poly	One-piece LLDPE safety yellow poly

Dimensions

Imperial	SD-95	SD-95SS
Approx. Weight (Empty)	55 lb	55 lb
Overall Length	48"	48"
Overall Height	36"	36"
Overall Width	38.25"	38.25"
Hopper Length	13"	13"
Hopper Width	30"	30"

Metric	SD-95	SD-95SS
Approx. Weight (Empty)	24.9 kg	24.9 kg
Overall Length	121.9 cm	121.9 cm
Overall Height	91.4 cm	91.4 cm
Overall Width	97.2 cm	97.2 cm
Hopper Length	33.0 cm	33.0 cm
Hopper Width	76.2 cm	76.2 cm

Operational

Imperial	SD-95	SD-95SS
Capacity (Weight)	160 lb	160 lb
Spreading Width	28"	28"

Metric	SD-95	SD-95SS
Capacity (Weight)	72.6 kg	72.6 kg
Spreading Width	71.1 cm	71.1 cm

Standard Equipment

Imperial	SD-95	SD-95SS
Top Screen	10-gauge wire grid	10-gauge wire grid
Cover	Clear poly cover	Clear poly cover

Metric	SD-95	SD-95SS
---------------	--------------	----------------

Walk-Behind Drop Spreaders Specifications

Top Screen	10-gauge wire grid	10-gauge wire grid
Cover	Clear poly cover	Clear poly cover

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Россия (495)268-04-70

Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Киргизия (996)312-96-26-47

Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Казахстан (7172)727-132

Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93